

SAFETY VALVE DRAIN OUTLET PIPE KIT

These Instructions apply to the following boilers:

Logic Combi 24.....	G.C. No. 47-348-56	Logic System 30.....	G.C. No. 47-750-27
Logic Combi 30.....	G.C. No. 47-348-57	Logic System 15IE.....	G.C. No. 41-750-44
Logic Combi 35.....	G.C. No. 47-348-58	Logic System 18IE.....	G.C. No. 41-750-45
Logic Combi E24.....	G.C. No. 47-348-88	Logic System 24IE.....	G.C. No. 41-750-46
Logic Combi E30.....	G.C. No. 47-348-89	Logic System 30IE.....	G.C. No. 41-750-47
Logic Combi E35.....	G.C. No. 47-348-90	Logic Code Combi 26.....	G.C. No. 47-348-74
Logic Combi ES24.....	G.C. No. 47-349-01	Logic Code Combi 33.....	G.C. No. 47-348-75
Logic Combi ES30.....	G.C. No. 47-349-02	Logic Code Combi 38.....	G.C. No. 47-348-76
Logic Combi ES35.....	G.C. No. 47-349-03	i-mini 24.....	G.C. No. 47-348-77
Logic Combi ESP24.....	G.C. No. 47-349-12	i-mini 30.....	G.C. No. 47-348-78
Logic Combi ESP30.....	G.C. No. 47-349-13	Project System 15.....	G.C. No. 41-750-59
Logic Combi ESP35.....	G.C. No. 47-349-14	Project System 24.....	G.C. No. 41-750-60
Logic Code Combi ES26.....	G.C. No. 47-349-04	Zanussi Ultra Combi 30.....	G.C. No. 47-002-01
Logic Code Combi ES33.....	G.C. No. 47-349-05	Zanussi Ultra Combi 35.....	G.C. No. 47-002-02
Logic Code Combi ES38.....	G.C. No. 47-349-06	Zanussi Ultra System 15.....	G.C. No. 41-002-01
Logic System 15.....	G.C. No. 47-750-24	Zanussi Ultra System 18.....	G.C. No. 41-002-02
Logic System 18.....	G.C. No. 47-750-25	Zanussi Ultra System 24.....	G.C. No. 41-002-03
Logic System 24.....	G.C. No. 47-750-26	Zanussi Ultra System 30.....	G.C. No. 41-002-04


These instructions must be read in conjunction with the Installation & Servicing Instructions supplied with the boiler.

This kit allows for greater flexibility when siting a boiler, as you can now allow safe discharge through a wall to the outside of the building, without needing access to the pipe from the outside.

This is particularly relevant to high rise installations but can be used for all installations.

KIT CONTENTS

1. Safety Valve Drain Outlet Pipe (length 398mm)
2. These Instructions

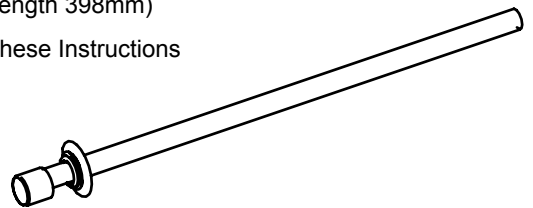


INSTALLING THE SAFETY VALVE DRAIN OUTLET PIPE

Note. Use all copper fittings.

Depending upon location of the boiler:

1. Drill 28mm dia Hole through external Wall
2. Insert pipe into wall from inside building.
3. Push pipe through wall and pull back to secure rubber pipe seal against the external wall.
4. Create pipework to connect boiler to safety valve drain outlet pipe as required.
5. Solder pipework assembly.
6. Check pipe criteria meets BS6798 - Specification for Installation of Gas Fired Boilers and that any discharge through the pipe will expel against the external wall.

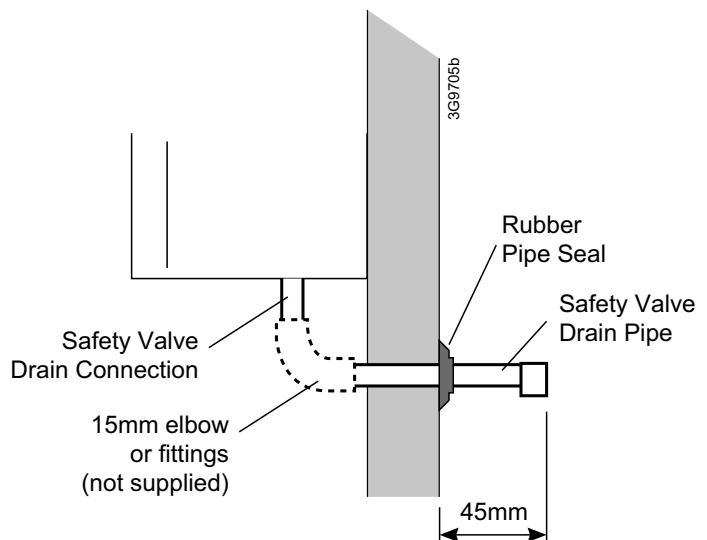

Ideal Boilers Ltd., P.O. Box 103, National Avenue, Kingston upon Hull, HU5 4JN.
Telephone: 01482 492 251 Fax: 01482 448 858. Registration No. London 322 137.

March 2016 UIN 205127 A09

Ideal Boilers Ltd., pursues a policy of continuing improvement in the design and performance of its products. The right is therefore reserved to vary specification without notice.

ideal